

DO NOT CUT LEADER. PRUNE DAMAGED OR DEAD WOOD AFTER PLANTING AND STAKING. KEEP CROWN SHAPE TYPICAL OF SPECIES. KEEP ANY PRUNING TO A MINIMUM.

SPECIFIED TREE STRAP COLLAR, DO NOT TWIST.

14 GAUGE GALV. WIRE WITH 1/2" Ø X 18" WHITE PVC PIPE ON WIRE. STAPLE WIRE TO POST TO PREVENT THE WIRE FROM SLIPPING. INSTALL AT PROPER HEIGHT AS SHOWN.

ONE WOOD STAKE/POST 6/8/10' IN HEIGHT, DEPENDANT ON TREE SIZE. DRIVE 24" INTO UNDISTURBED SUBGRADE OUTSIDE PLANTING PIT. DO NOT PENETRATE ROOT BALL WITH POST. PLACE POST IN LINE WITH PREVILING WIND ON WINDWOOD SIDE.

PLANT TREE 1" ABOVE FINISHED GRADE, ENSURE THAT TOP OF ROOT FLARE IS VISIBLE.

APPLY ORGANIC MULCH AROUND TREE TO A MINIMUM OF 3' RADIUS FROM TRUNK, FORMING A RING TO A DEPTH OF 4". DO NOT PILE MULCH AROUND TREE TRUNK AND NO MORE THAN 1" DEEP ON TOP OF ROOT BALL.

2" HIGH WATER BASIN WITH MULCH OR SOIL, TYP. REMOVE BASIN UPON SODDING IN IRRIGATED AREA

BACKFILL HOLE WITH EXCAVATED NATIVE SOIL. COMPOST AND MYCORRHIZAE SHOULD BE ADDED TO AMEND SOIL. (DEPENDING ON SITE CONDITIONS.)

REMOVE ALL BURLAP, TWINE & WIRE FROM ROOT BALL. REMOVE TREE BASKET OR CONTAINER. REMOVE ANY NURSERY STAKES.

INITIAL STABILIZING BACKFILL TO 1/3 DEPTH, LIGHTLY COMPACTED NATIVE SOIL AROUND ROOT BALL TO STABILIZE..


SET ROOT BALL ON UNDISTURBED SUBGRADE TO PREVENT SETTLING. DO NOT COMPACT SUBGRADE.

## DECIDUOUS TREE PLANTING

NOT TO SCALE

**NOTE:**

- NEED FOR ADDITIONAL POSTS DEPENDANT ON SITE LOCATION AND SIZE OF TREE
- REMOVE POST AFTER ONE GROWING SEASON
- WOOD MULCH ONLY, NO ROCK OR INORGANIC MULCH LIKE RUBBER OR PLASTICS

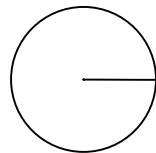

GUYING DETAIL